

# TSX INSTRUCTIONS

## Voting Instructions for AccuVote-TSX™

If you have questions, please contact your County Board of Elections

### 1 Start: Insert Card



**Insert** voter access card into slot at upper right side of the screen.

Card should be face up with arrow pointing left. Push card firmly in until it clicks.

### 2 Read "Instructions" Screen



Before you begin the voting process, you can magnify or change the contrast of your ballot to help increase readability.

To begin voting, **touch** the "Next" button on the screen. You will use the "Next" button to see each ballot page until you have reached the end of the ballot.

### 3 Select Candidates or Issues OR Select "Write-In" if Desired



**Touch** the box on the screen next to your choice. An "X" will appear designating your selection.

To change or cancel your selection, **touch** the box again and make another selection.

If there are write-in candidates on the ballot you would like to vote for, select "write-in" and a keyboard will appear on the screen.



Type the write-in you would like, then select "Record Write-In."

The normal voting screen will return and the name you entered will appear as the choice for that particular race.

**Touch** "Back" to review previous pages.

### 4 Review Your Ballot



On the Summary Page, review your choices.

Items in red are races that were left blank or incomplete.

If you want to vote for a race that was left blank, incomplete, or change your vote for any race, just **touch** the desired race you would like to change and you will be taken back to the proper page to cast your vote.

### 5 Print Ballot for Verification



To verify your selections, **touch** "Print Ballot" and you will see an enclosed printed copy of your choices to the right of your machine.

After reviewing your ballot printout you can either cast or reject your ballot.

### 6 Cast Your Ballot



**Touch** "Cast Ballot" when you are ready to record your vote. Once your ballot has been cast, the printer will scroll to hide your selections.

### 7 Finish: Remove Card



You have completed the electronic touch screen voting process.

**Remove** your voter access card and return it to a poll worker.